

# THREE TYPE CAN BE ADJUSTMENT



Extreme light




ordinary light



SOS

## TELESCOPIC FOCAL LENGTH

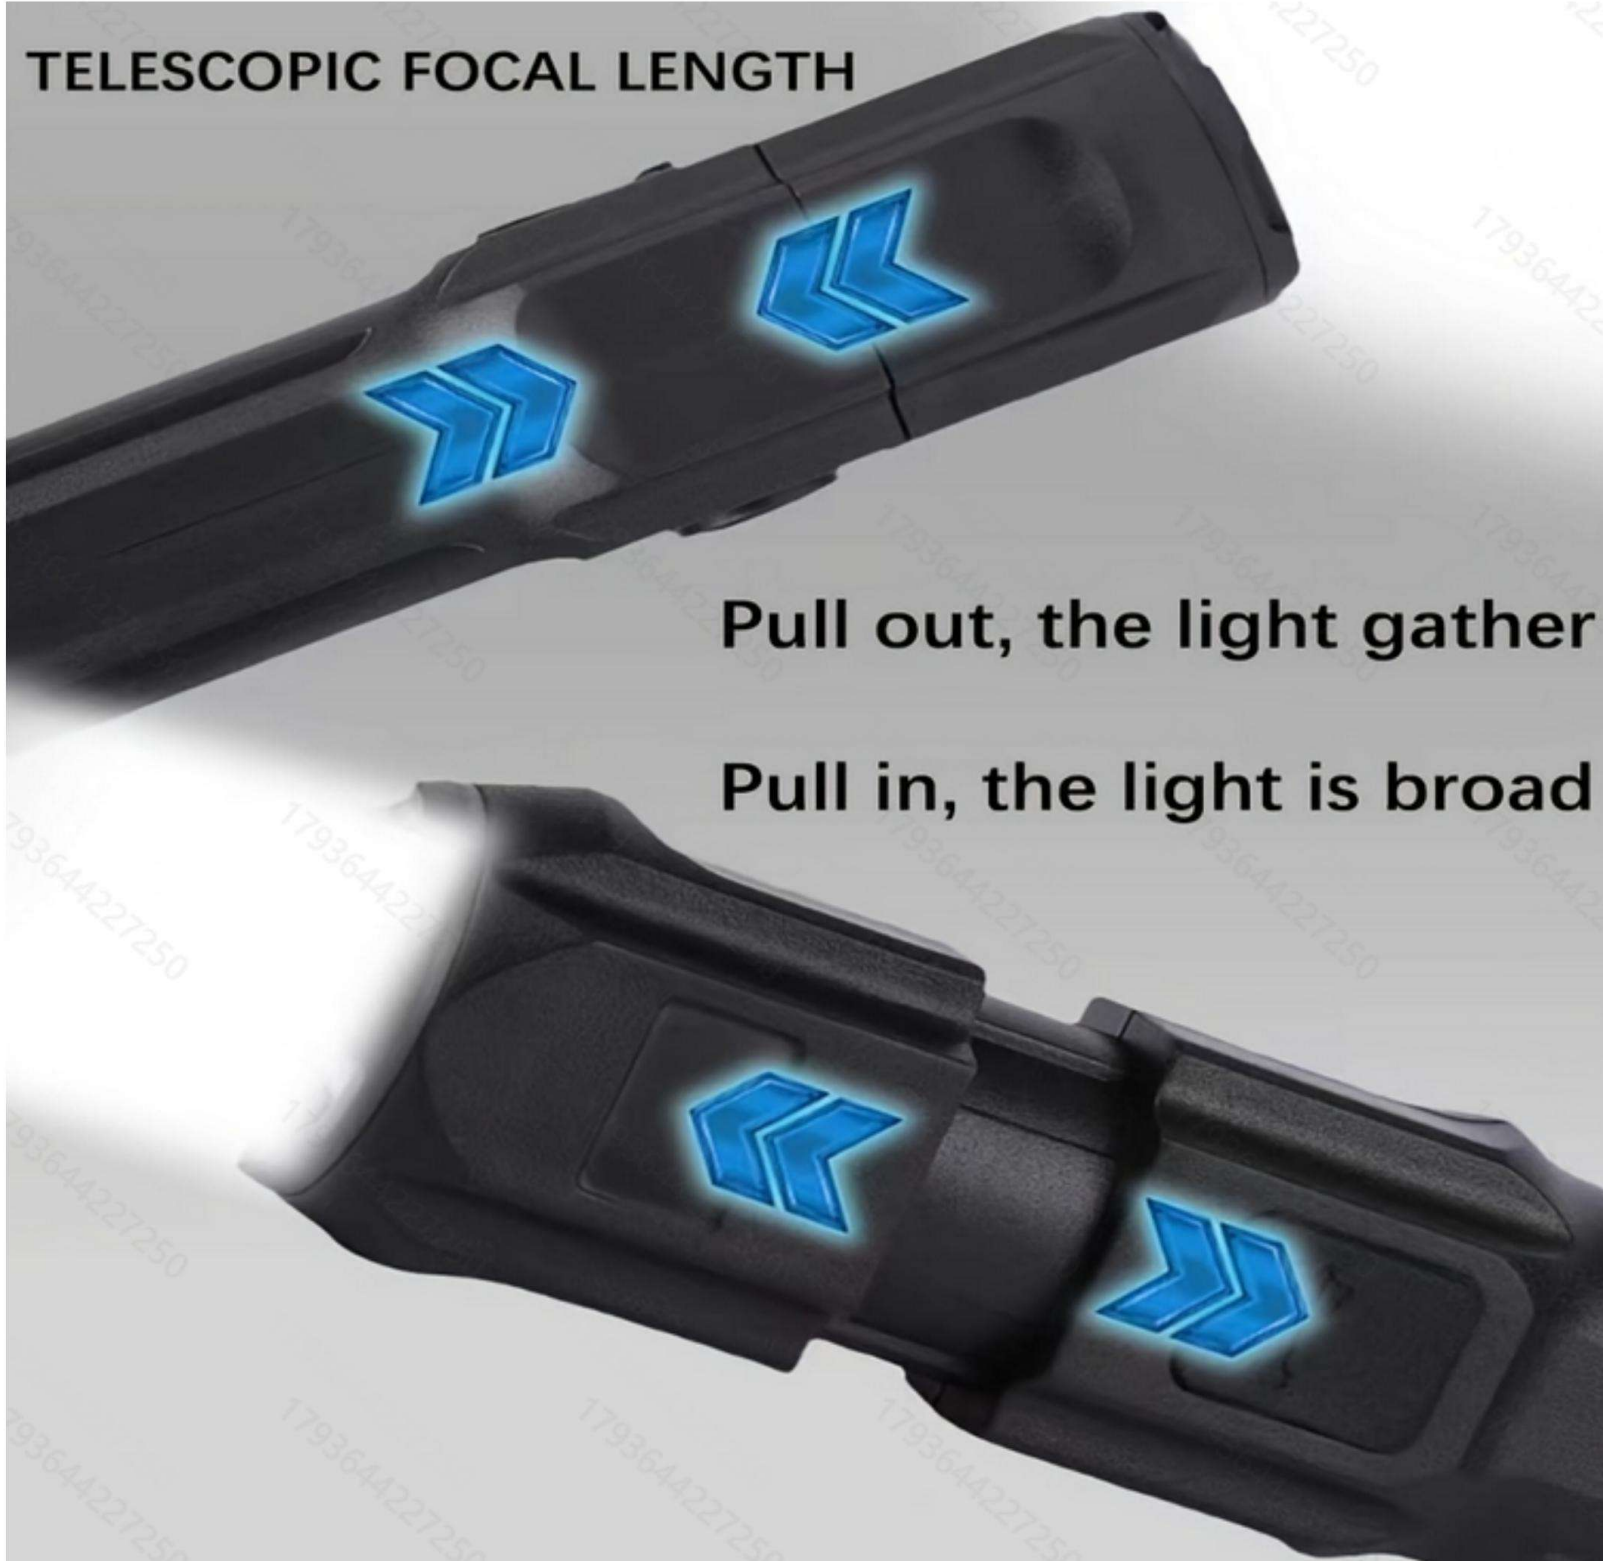

Pull out, the light gather

Pull in, the light is broad

**USB DIRECT CHARGING**

**Do not remove battery**



## AJUSTE DE LATAS DE TRES TIPO



luz extrema



luz ordinaria



SOS

LONGITUD FOCAL TELESCÓPICA



Saca, la luz se reúne  
Entra, la luz es amplia.

CARGA DIRECTA USB  
No quitar batería



# DREIARTIGE KÖNNENANPASSUNG



## TELESKOPISCHE BRENNENLÄNGE



Herausziehen, das Licht sammelt sich

Ziehen Sie ein, das Licht ist breit



**USB-DIREKTLADEN**  
Nicht entfernen Batterie



TROISTYPE PEUT RÉJUSTEMENT

179364422T250

179364422T250



Lumière extrême



lumière ordinaire



SOS

Focale télescopique



Sortez, la lumière se rassemble  
Rentrez, la lumière est large

CHARGEMENT DIRECT USB  
Ne pas enlever batterie



# スリータイプ缶ビーズ調整

1793644227250

1793644227250



エトルメライト



普通の光



SOS

望遠焦点距離



引き出して光が集まる  
引き込めば、光は広がる

# USB直接充電

外さないでくださいバッテリー

